



- J5, J6, J7  
Reserved interface of the module
- J1  
Disconnected:parallel mode  
Connected:serial mode
- J2  
Disconnected:comparator doesn't work, not to generate square wave  
Connected:comparator works and it generates square wave.Please adjust R11 to control the duty cycle
- J4  
Sine wave 2 output
- J3  
Disconnected:outside potential or potential of J5,can adjust the output amplitude  
Connected:generate DAC current by R1

Title		
Size	Number	Revision
B		
Date:	23-Nov-2010	Sheet of
File:	H:\AD1\【AD1-DDS】\【DDS-AD9850-AD9851】\AD9850_1_V4\AD9850_1.SCI	