

Pinless **Moisture Meter** **User Manual**



Measuring Range:
0 - 100 digits

Hold the instrument as near
to the back as possible.

The instrument should be
held at an angle of 90° to
be surface to be measured.

**Please read this manual before switching the unit on.
Important safety information inside.**

Contents

	Page
1.Introduction	3
2.Features.....	3
3.Specification.....	4
4.Front Panel Description.....	5
5.Operation.....	6
6.Battery Replacement.....	7

1.Introduction

The Pinless Moisture Meter is an electronic dampness indicator with a measuring process working on the principle of high frequency measurement. The instrument is used for non-destructively tracing dampness in building materials of all kinds as well as for detecting damp distribution in walls, ceilings and floors. It is particularly suitable for pre-testing the readiness of building materials for covering prior to CM measurement.

2.Features

- Quickly indicate the moisture content of materials
- Depth of penetration about 20-40mm.
- Low battery indication
- Auto Power Off
- MAX/MIN Function
- Measure and HOLD Function
- White Backlit LCD Display

3.Specification


Sensor Type	Metal Spheroid
Measuring Range	0 to 100
Max Resolution	1
Battery	9V battery
Dimensions	180mm x 45mm x 35mm
Weight	180g

Adjustment

- The instrument is calibrated fully electronically and readjustment is not necessary.
- Safety remarks.
- These is a risk of injury if the metal ball comes into contact with live parts. Do not use the instrument in the immediate vicinity of older equipment or equipment equally sensitive to high frequencies (e.g.functioning medicinal equipment). Use the instrument only for measuring the dampness in hardened building materials by bringing the ball into contact with the surface.
- Instrument Check.
- Hold the instrument as near to the back as possible. Press the “MEAS” button and hold the instrument with the ball in the air. The displayed value must be between -5 and +5.

4. Front Panel Description

- 1-Metal Ball
- 2-LCD Display
- 3-Power ON/OFF Button
- 4-MAX/MIN Button
- 5-Backlight Button
- 6-MEAS Button
- 7-Battery Cover

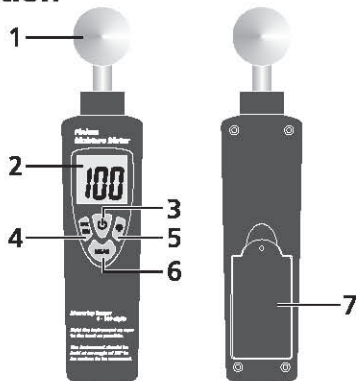

Button Function

•Power Button

Turn the meter power ON or OFF.

•MEAS Button

Press the MEAS button, the instrument will start measuring. Release this button the "HOLD" icon will appear on the LCD indicating that the current reading is being held.

•MAX/MIN Button

When taking measurements, press MAX/MIN Button, the "MAX" icon will appear on LCD display and the meter will begin keeping track of MAX value. Press the button again, "MIN" icon will appear on LCD display and the meter will begin keeping track of MIN value. Press MAX/MIN button for two seconds to exit this mode.

•Backlight Button

Turn the backlight on or off.

5. Operation

Hold the instrument as near to the back as possible. Press the "MEAS" button and use the ball to scan the surface under investigation. The ball must be in firm contact with the material. To obtain the best results, the instrument should be held at an angle of 90° to the surface to be measured.

Note:

- Do not take measurements on metallic linings!
- In corners or recessed areas a distance of ca. 8-10 cm from the edge/recess must be maintained.
- If there is any metal in substructure (constructional steel, channels, pipes, plaster rails, etc.) and with normal coverings, the display jumps to ca. 50 digits for otherwise dry surroundings.
- It is only possible to reach a conclusion about the absolute dampness in wt-% or the dampness in CM-% if the normal drying out process has taken place (e.g. not during or shortly after the use of drying agents or heat guns). If there is not a roughly normal variation in dampness between the surface and the interior, too low a measured value may be indicated.
- The raw density of the material being measured has a noticeable effect. Basically, the value displayed with dry and damp building materials increases correspondingly with increasing raw density.

- The values given in the table below are indicative and non-binding. Please bear in mind, when evaluating the measured value displayed on the NON-Contact Moisture Meter with respect to the material, that it is not a dampness measurement qualified to VOB or the relevant specialist regulations.
- All information and tables in these operating instructions concerning permissible or common dampness conditions in practice as well as the general definition of terms are taken from the technical literature. The manufacturer of the instrument can thus not give any guarantee for the correctness of this information. The conclusions to be drawn from the result of measurements by each user depend upon the individual circumstances and his experience gained from professional practice.

Construction material:

Gypsum	0..35	Dry
	36..60	Half-dry
	61..100	Wet
Cement	0..25	Dry
	26..50	Half-dry
	51..75	Wet
	above 75	All Wet

6. Battery Replacement

If the icon “” appears on the LCD display, it indicates that the battery should be replaced. Open the battery case and replace the exhausted battery with new battery.

Information in this document is subject to change without notice.
©2012 M & I Instruments Inc. All Rights Reserved.

M & I Instruments Inc.
7035 Maxwell Road, Unit 8
Mississauga ON Canada
L5S 1R5
Tel: 1- 416-558-1088
Fax: 1- 905-670-8243
Website: www.microinstruments.ca
Email: sales@microinstruments.ca

Rev.090422

